

 

## PRS SE 594

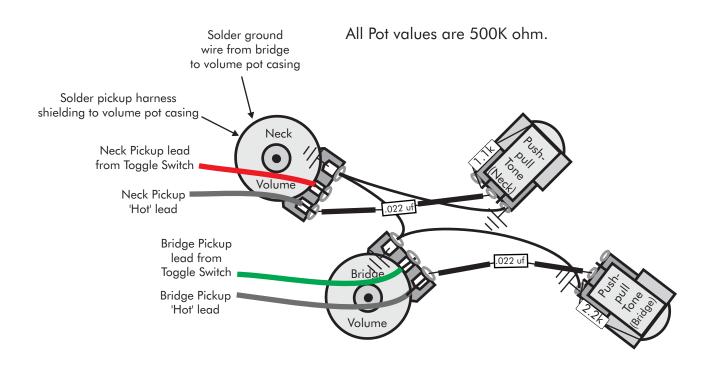

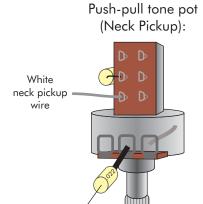



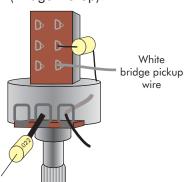

## **Operating Instructions**

3-way toggle pickup switch:
Position 1 (down) - Treble Pickup
Position 2 - Treble and Bass Pickups
Position 3 (up) - Bass Pickup
Push-Pull Tone Pot:
Down - Humbucker Mode
Up - Single Coil Mode