


Model:
PRS NF53

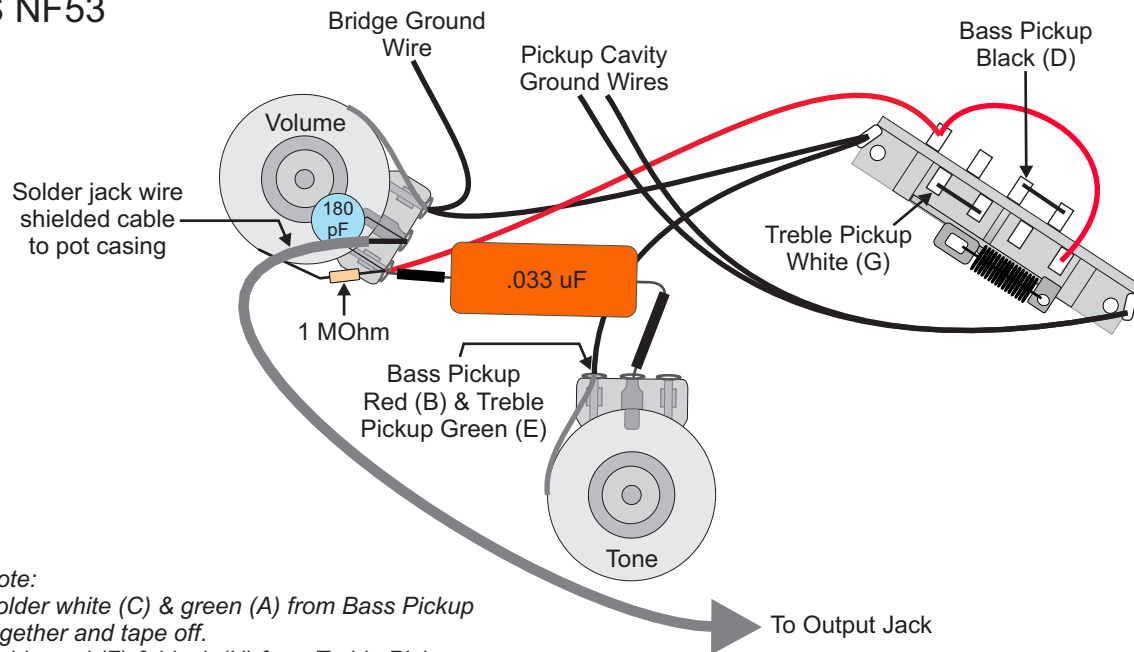


Note:
Solder white (C) & green (A) from Bass Pickup together and tape off.
Solder red (F) & black (H) from Treble Pickup together and tape off.

Bass Pickup Wires: Treble Pickup Wires:

A - Green	E - Green
B - Red	F - Red
C - White	G - White
D - Black	H - Black

3-way Pickup Selector Switch:

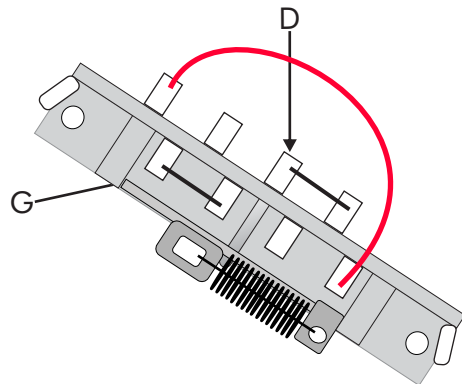

Operating Instructions

3-Way Blade Switch

Position 1 (down) - Treble Pickup
Position 2 (middle) - Treble and Bass Pickups
Position 3 (up) - Bass Pickup

Note Pickup shape is just for reference.
All pickups using this diagram shall be oriented in this manner.

